

# Vacuum Cleaner

1. Read all instructions before using.
2. Do not leave appliance when plugged in.
3. Do not use with damaged cord or plug.
  - a. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to the service center.
4. Do not pull or carry by cord, close a door on cord, or pull around sharp edges or corners.
  - a. Do not run appliance over cord.
  - b. Keep cord away from heated surfaced.
5. Do not unplug by pulling on cord.
  - a. To unplug, grasp the plug, not the cord.
6. Do not handle plug or appliance with wet hands.
7. Do not put any object into openings.
  - a. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
8. Keep hair, fingers, and all parts of body away from openings and moving parts.
9. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
10. Do not use without dust-bag and/or filters in place.
11. Turn off all controls before unplugging.
12. Do not use to pick up any liquids, flammable or combustible liquids such as gasoline or use in areas where they may be present.
13. Use extra care when cleaning on stairs.